

POWER IT 120 DEGREE / 6-POD

connect **it.**

1. ATTACH CIBLOCK PLATE UNDERNEATH WORKSURFACE 4" IN FRONT OF GROMMET HOLE USING HARDWARE PROVIDE AS SHOWN IN FIG. A.
2. INSERT CIBLOCK INTO BLOCK PLATE AND SLIDE RIGHT OR LEFT UNTIL IT SNAPS INTO PLACE AS SHOWN IN FIG. B.

FIG. A



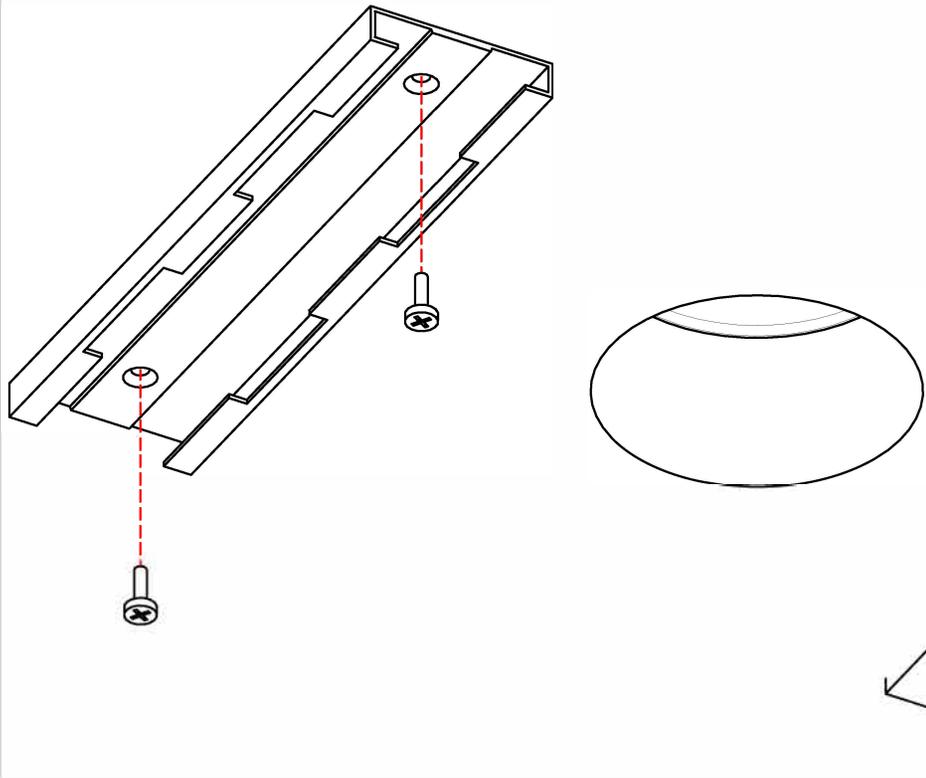


FIG. B

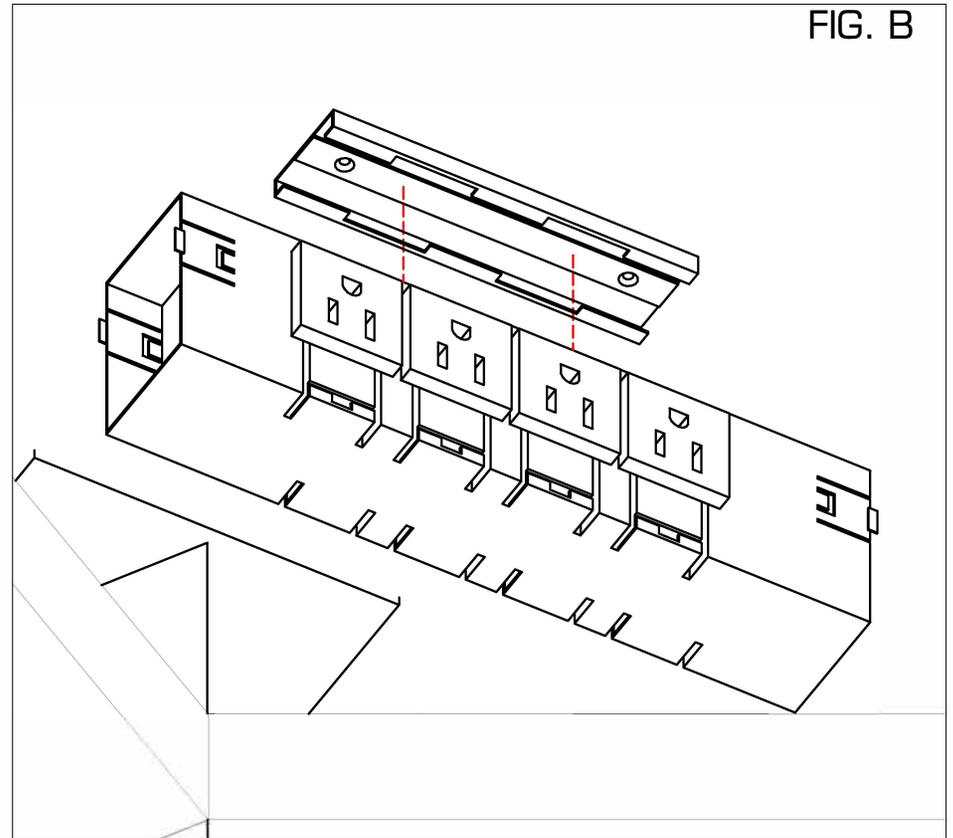

3. ROUTE BASE IN-FEED AND JUMPER AS SHOWN BELOW.

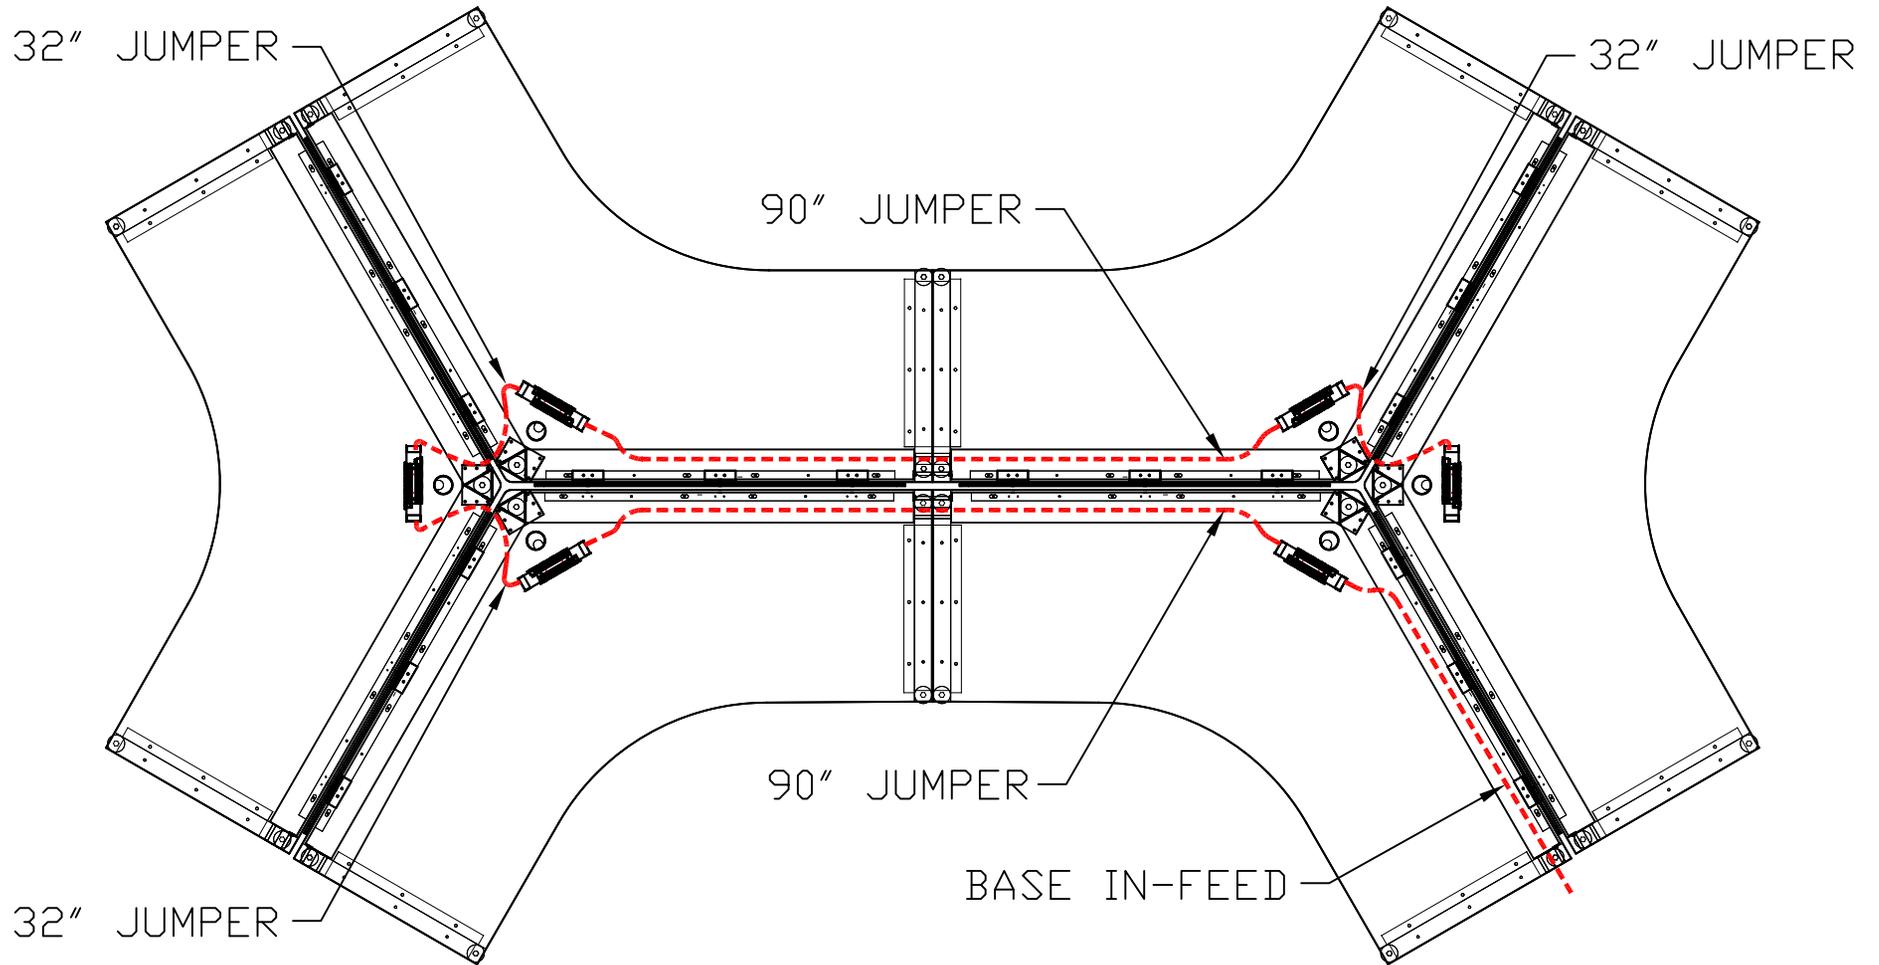

NOTE: ALL SINGLE SIDE POWER BLOCKS