


CONNECT IT BENCHING







connect **it.**

1. FLIP WORKSURFACE OVER AND PLACE ON BLANKET TO AVOID DAMAGE.
2. ALIGN LEFT LEG WITH EDGE OF WORKSURFACE AND ATTACH WITH HARDWARE PROVIDED.
3. ATTACH TROUGH TO LEG USING HARDWARE PROVIDED. MUST USE 6" OR GREATER PHILIP HEAD EXTENSION BIT.
4. REPEAT STEP 2 AND 3 FOR RIGHT LEG.

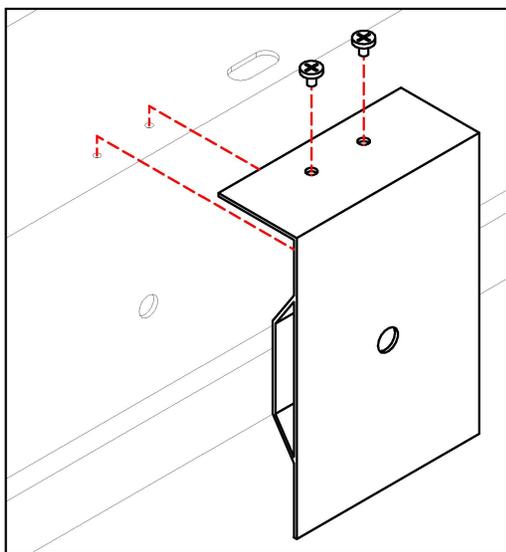

5. IF SCREEN IS REQUIRED, ATTACH BRACKETS TO TROUGH WITH HARDWARE PROVIDED.

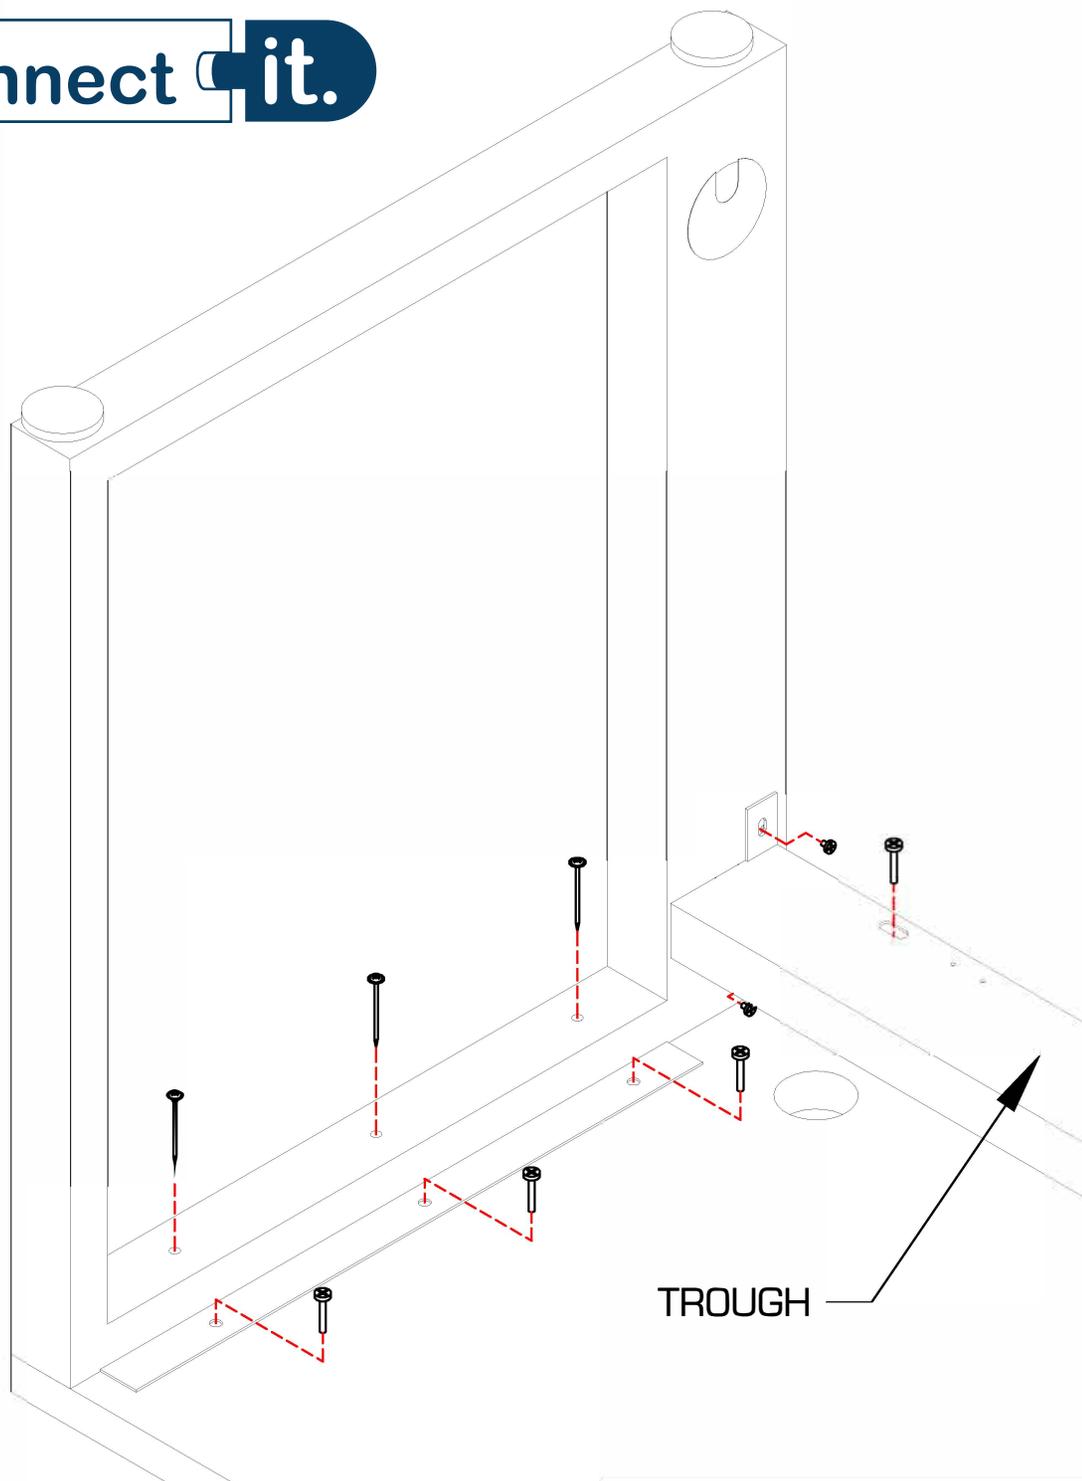

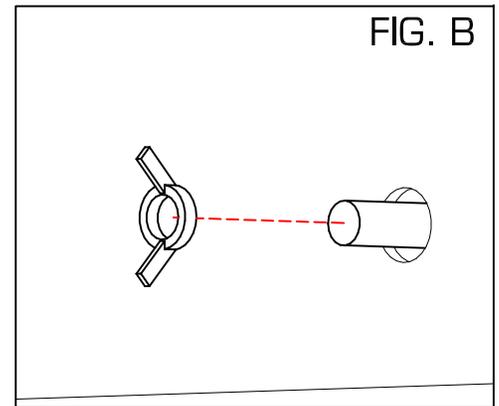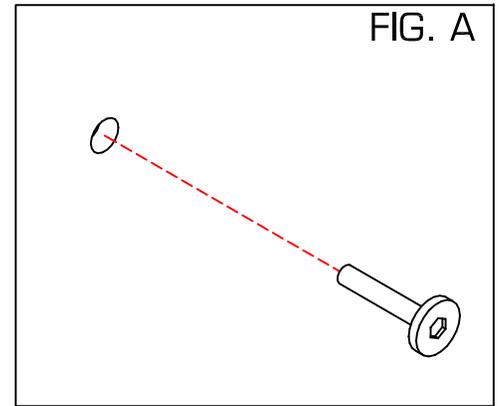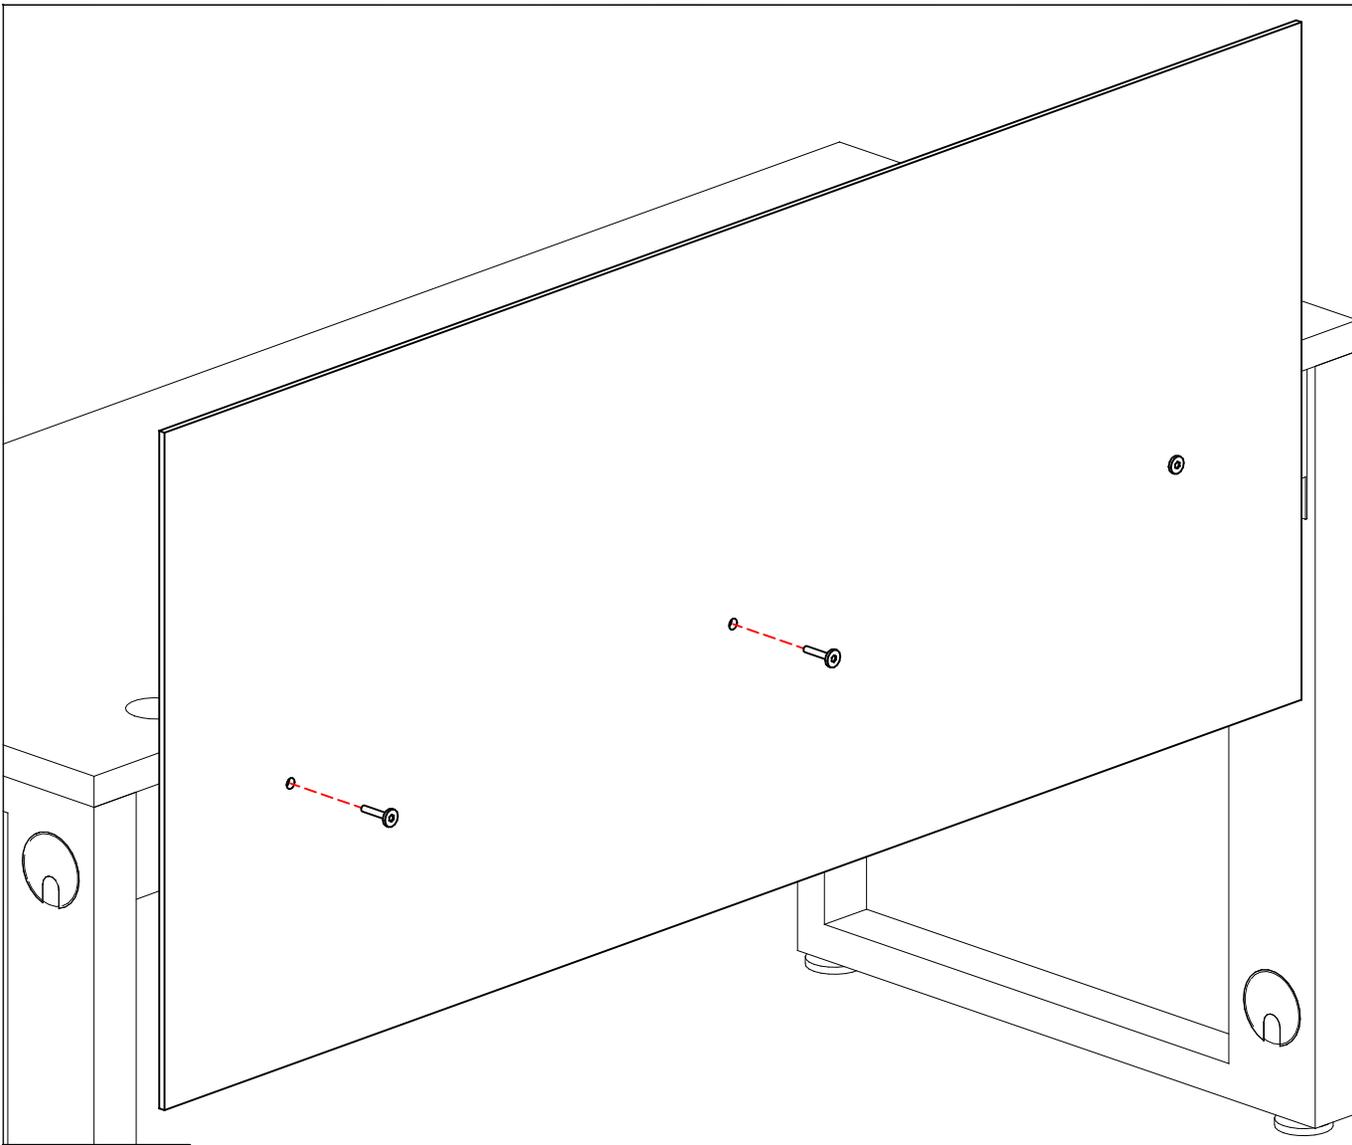

6. IF SCREEN WAS ORDERED, ALIGN HOLES ON SCREEN WITH HOLES ON SCREEN BRACKETS AND ATTACH USING SCREW (FIG. A) AND WINGNUT (FIG. B).

7. IF SCREEN WAS NOT ORDERED, USE METAL STICKERS PROVIDED TO COVER HOLES ON FRONT SIDE OF TROUGH.