


CONNECT IT L-UNIT

connect it.



1. FLIP WORKSURFACE OVER AND PLACE ON BLANKET TO AVOID DAMAGE.
2. ALIGN LEFT LEG WITH EDGE OF WORKSURFACE AND ATTACH WITH HARDWARE PROVIDED.
3. ATTACH TROUGH TO LEG USING HARDWARE PROVIDED. MUST USE 6" OR GREATER PHILIP HEAD EXTENSION BIT.
4. REPEAT STEP 2 AND 3 FOR RIGHT LEG.

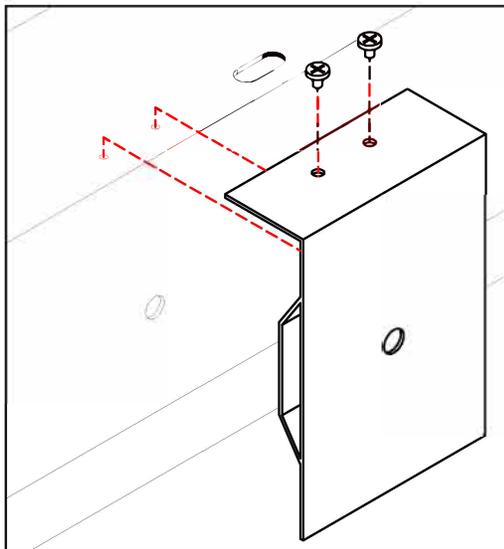

5. IF SCREEN IS REQUIRED, ATTACH BRACKETS TO TROUGH WITH HARDWARE PROVIDED.


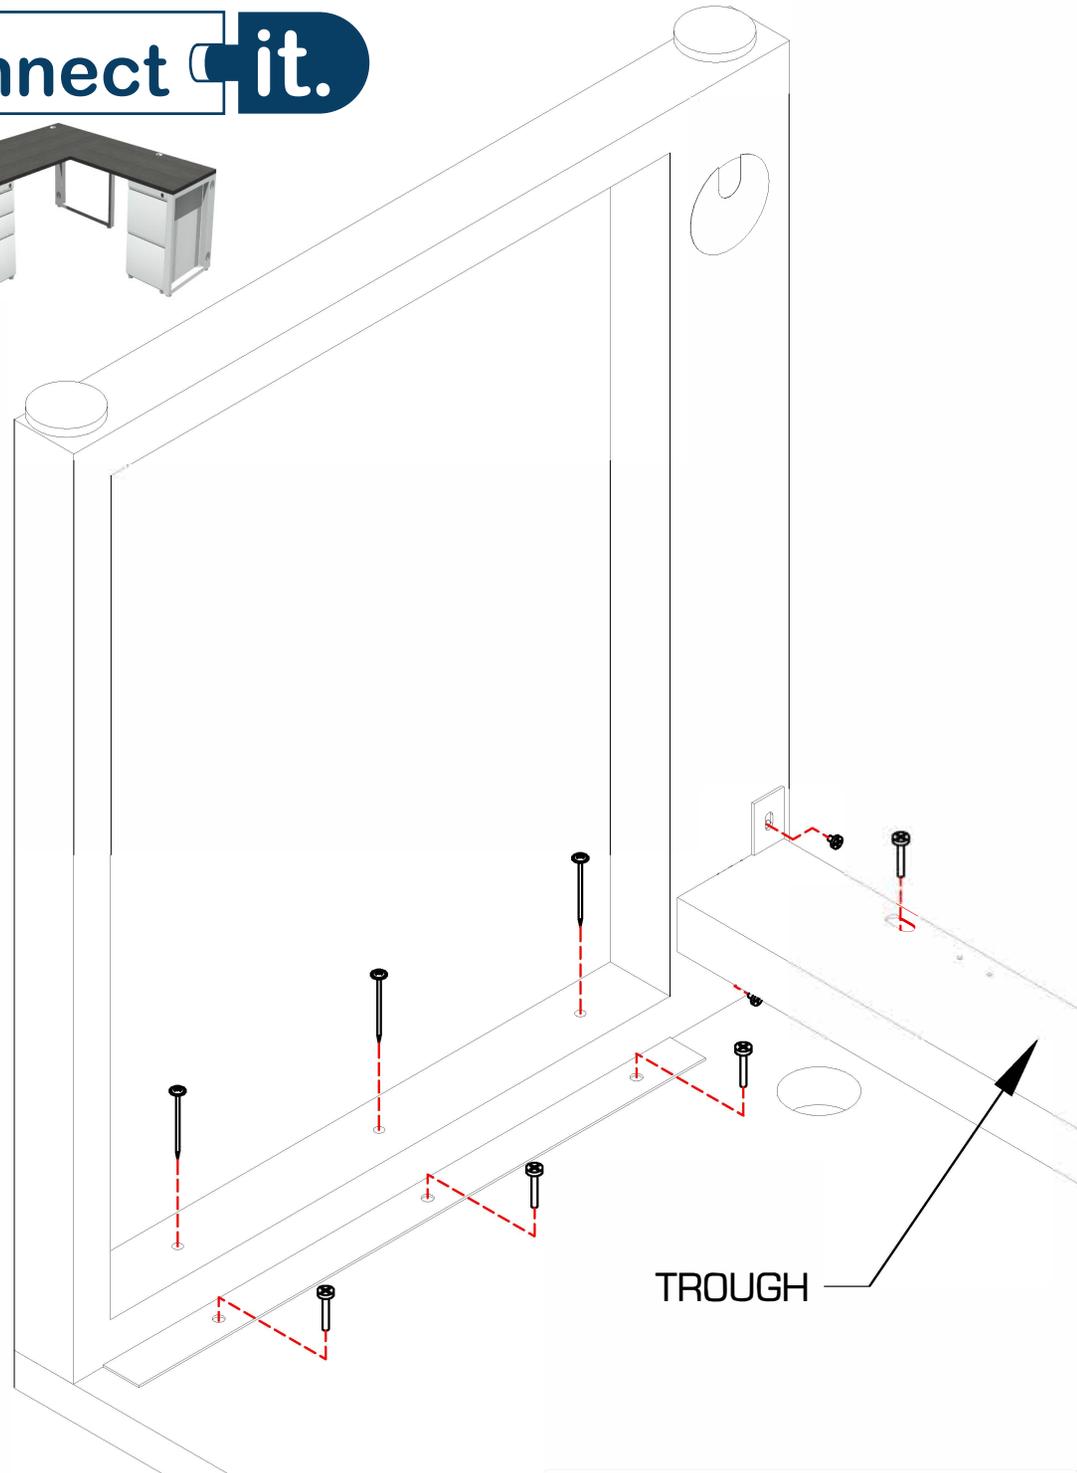


FIG. A

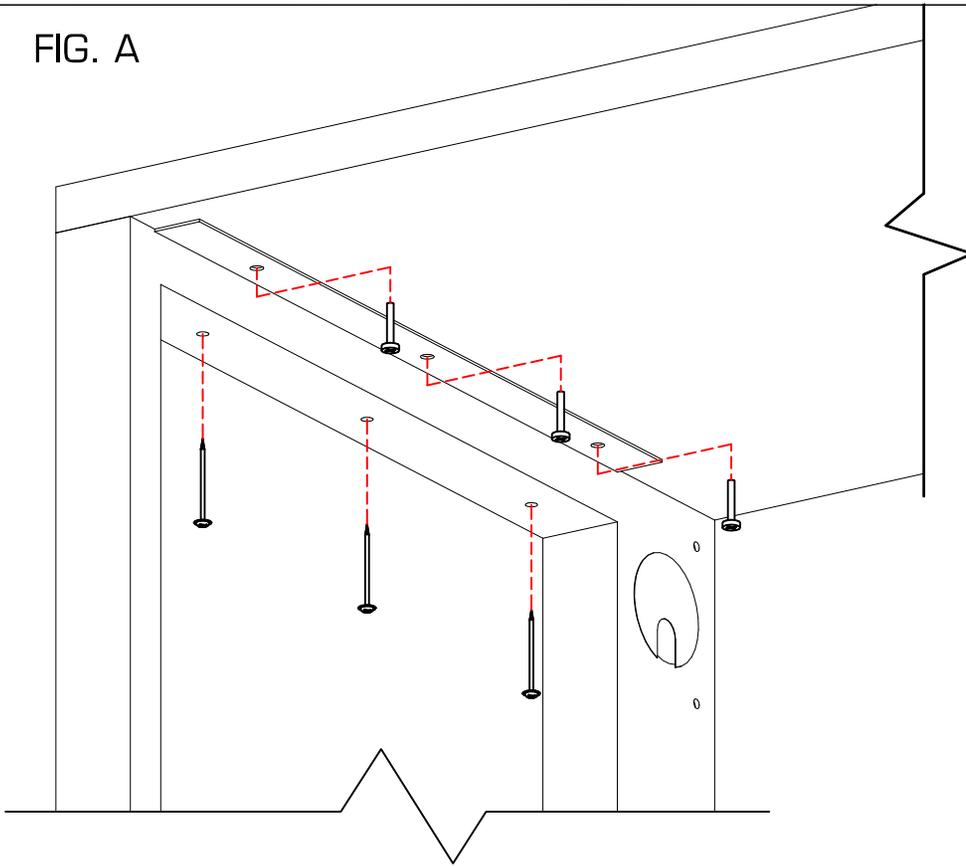

2" GAP





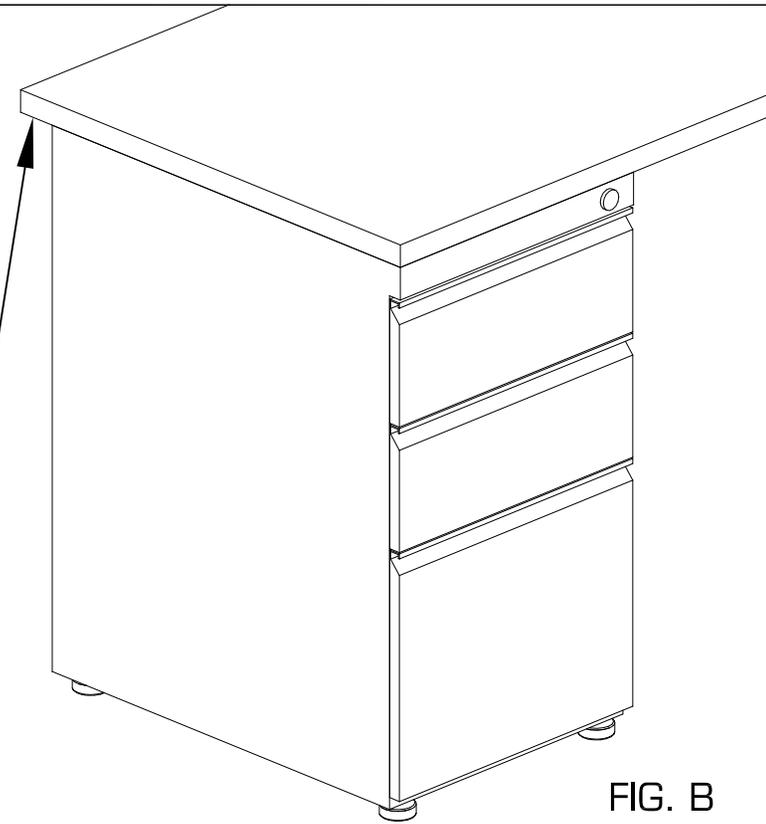


FIG. B

6. IF USING O-LEG ON RETURN WORKSURFACE REFER TO FIG. A AND ATTACH USING HARDWARE PROVIDED. (REFER TO LAYOUT FOR HANDEDNESS)
7. IF USING PEDESTAL ON RETURN WORKSURFACE REFER TO FIG. B AND ATTACH USING HARDWARE PROVIDED. (REMOVE TOP TWO DRAWERS IN ORDER TO ATTACH TO WORKSURFACE) (REFER TO LAYOUT FOR HANDEDNESS)
8. ALIGN RETURN WORKSURFACE WITH MAIN DESK AND ATTACH USING FLAT BRACKETS AND HARDWARE PROVIDED.

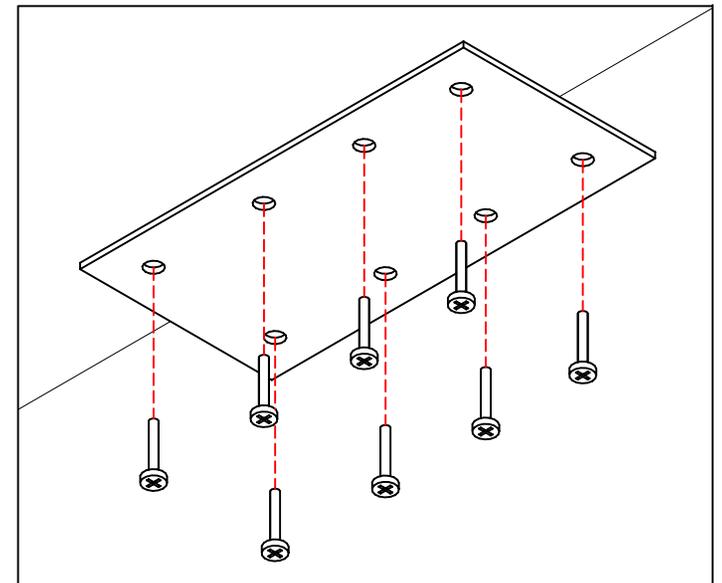
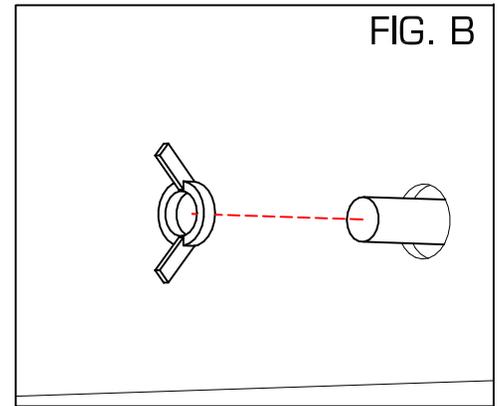
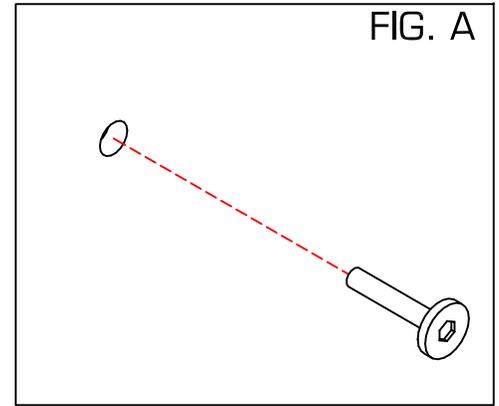


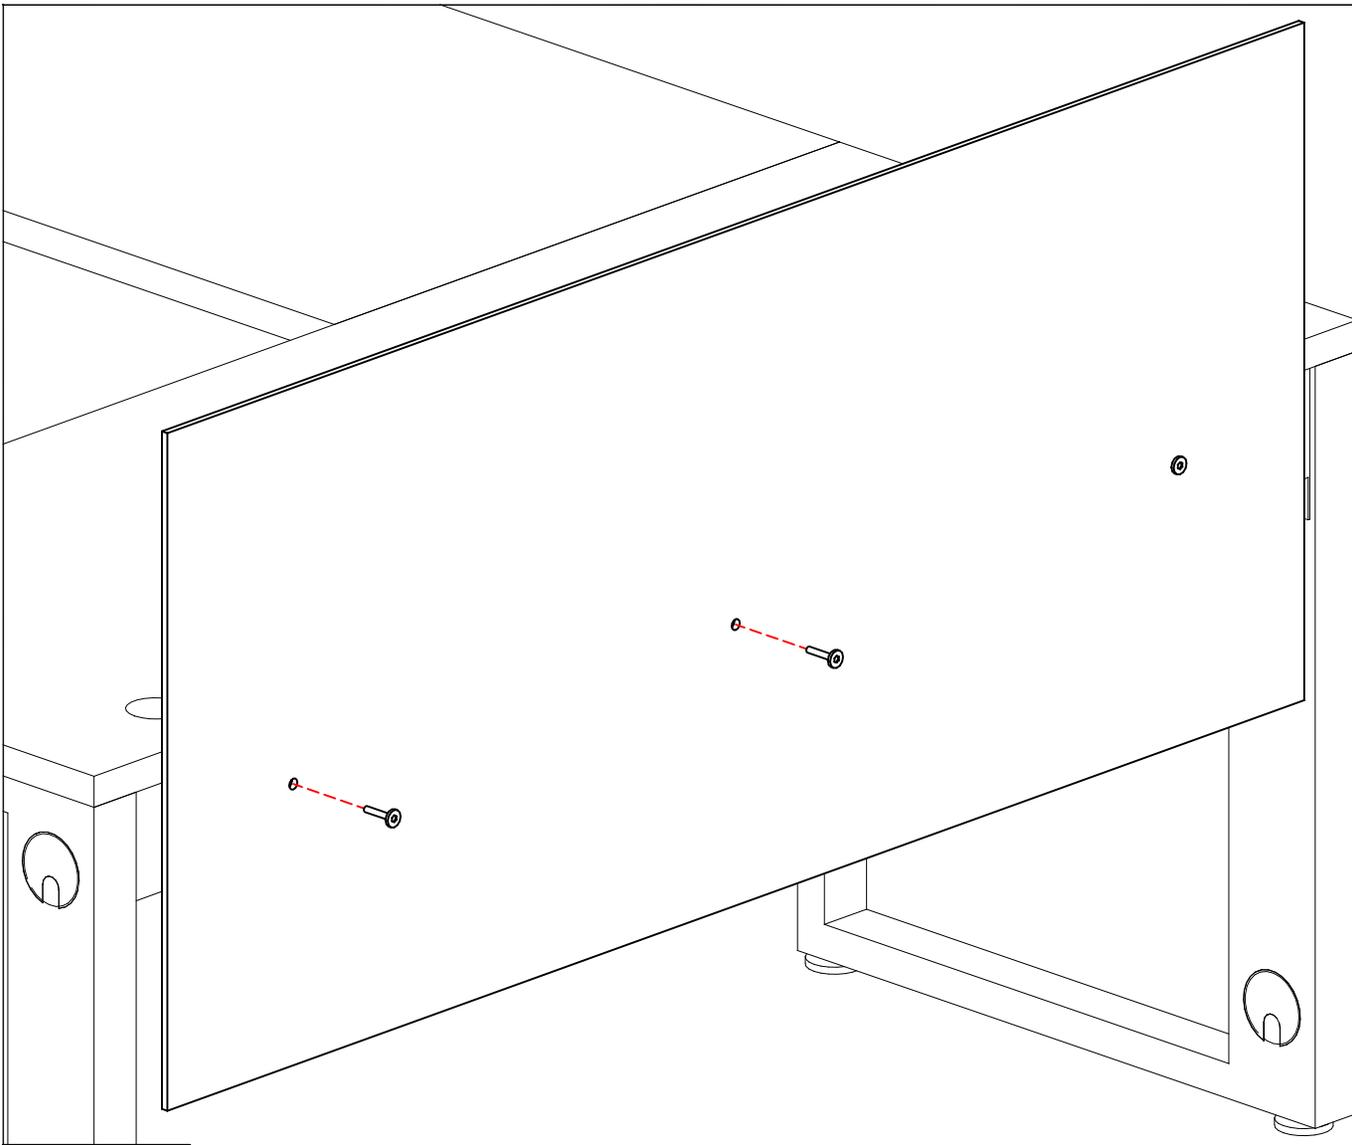

9. IF SCREEN WAS ORDERED, ALIGN HOLES ON SCREEN WITH HOLES ON SCREEN BRACKETS AND ATTACH USING SCREW (FIG. A) AND WINGNUT (FIG. B).

10. IF SCREEN WAS NOT ORDERED, USE METAL STICKERS PROVIDED TO COVER HOLES ON FRONT SIDE OF TROUGH.

11. IF RETURN SCREEN WAS ORDERED, ATTACH DESK AND LEG BRACKETS TO SCREEN USING HARDWARE PROVIDED. (FIG. A) (FIG. B).

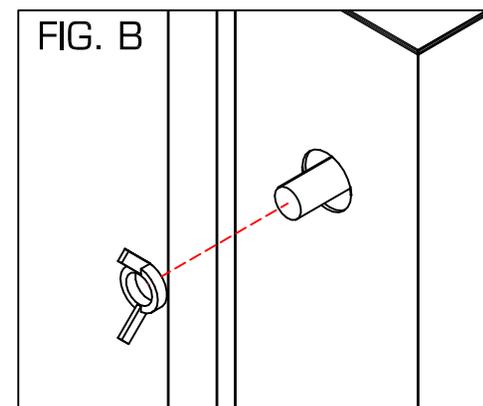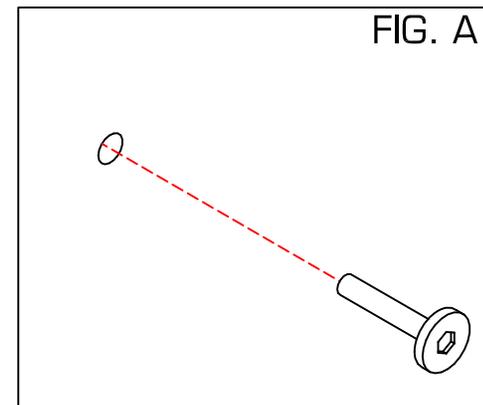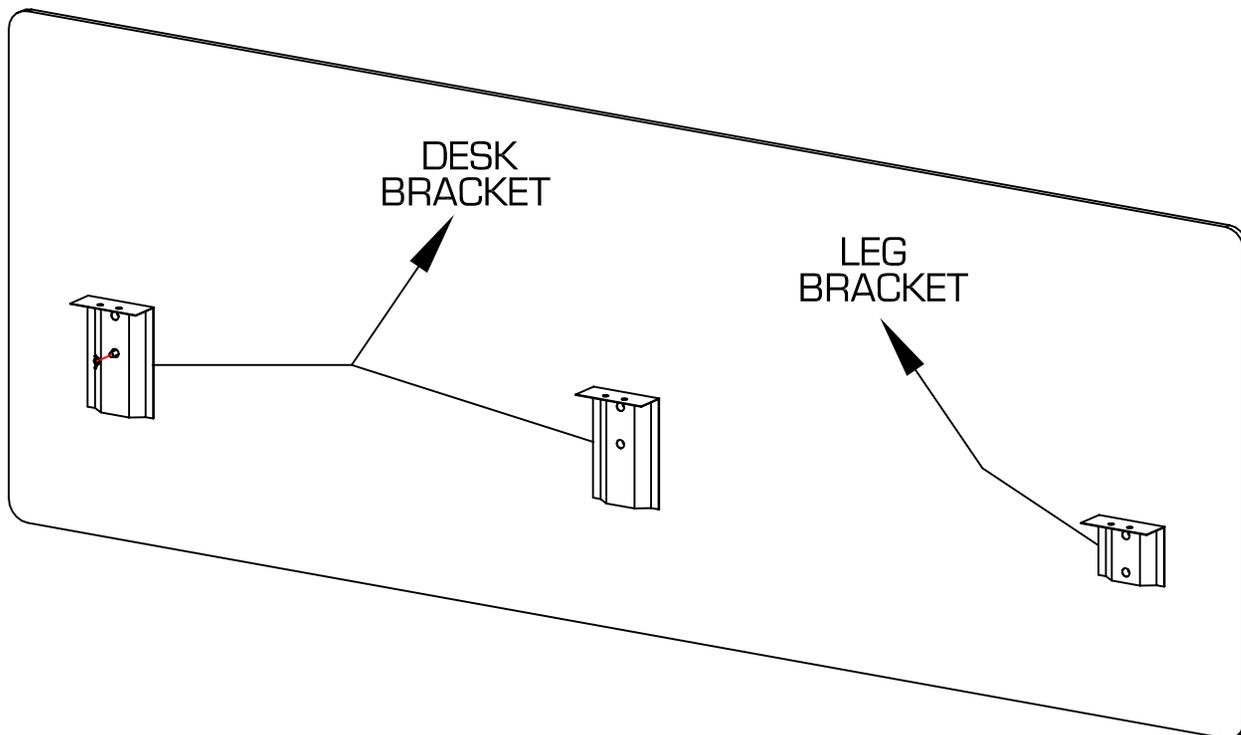

12. ONE PERSON WILL NEED TO HOLD SCREEN IN PLACE WHILE ANOTHER PERSON USES PROVIDED HARDWARE TO ATTACH SCREEN TO UNDERSIDE OF WORKSURFACE AND LEG, SEE FIG. C AND FIG. D.

13. IF INSTALLED CORRECTLY THERE SHOULD BE A 3" GAP BETWEEN EDGE OF SCREEN AND EDGE OF WORKSURFACE.

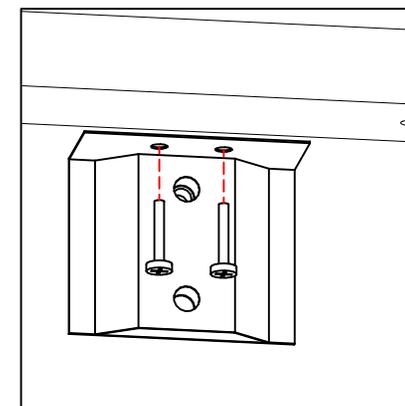
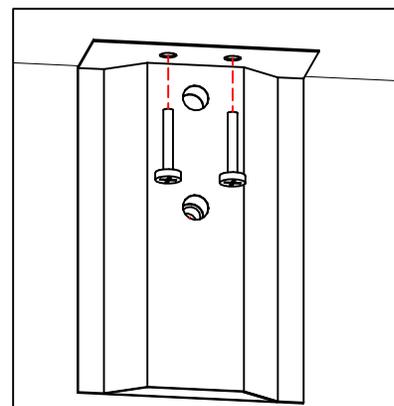


FIG. C

FIG. D