




connect it. 120° STATION



1. ATTACH BOTH TROUGHS TO LEFT, RIGHT AND TRIANGLE LEG USING HARDWARE PROVIDED.

2. FIGURE A SHOWS COMPLETED ASSEMBLY.




FIG. A

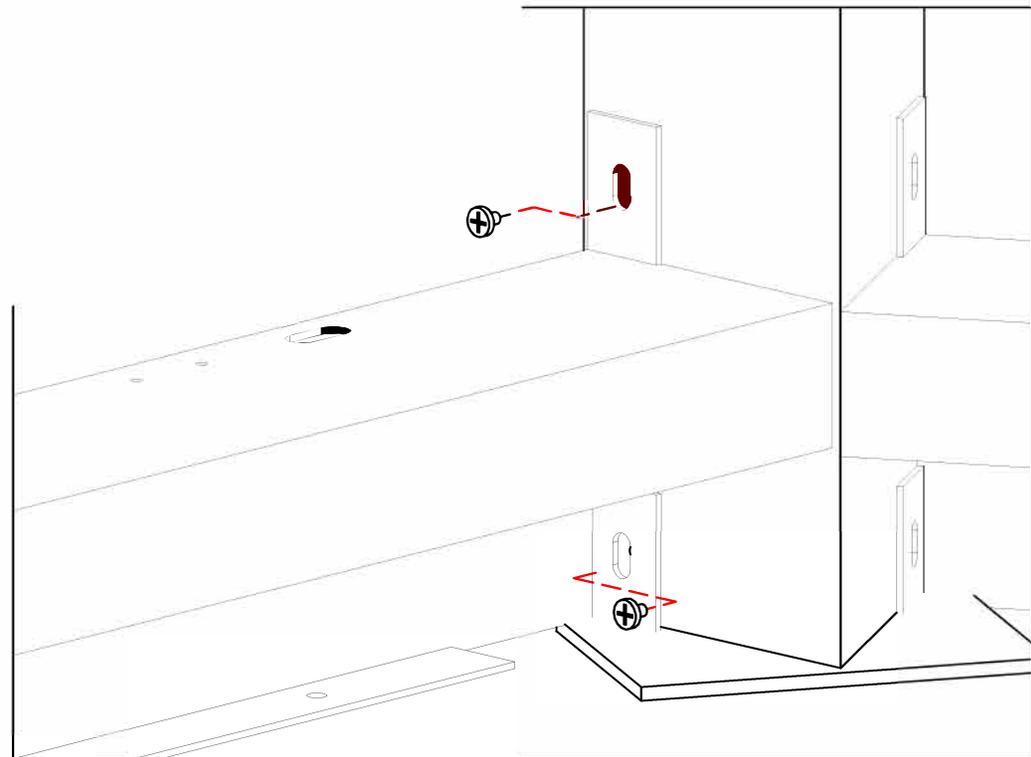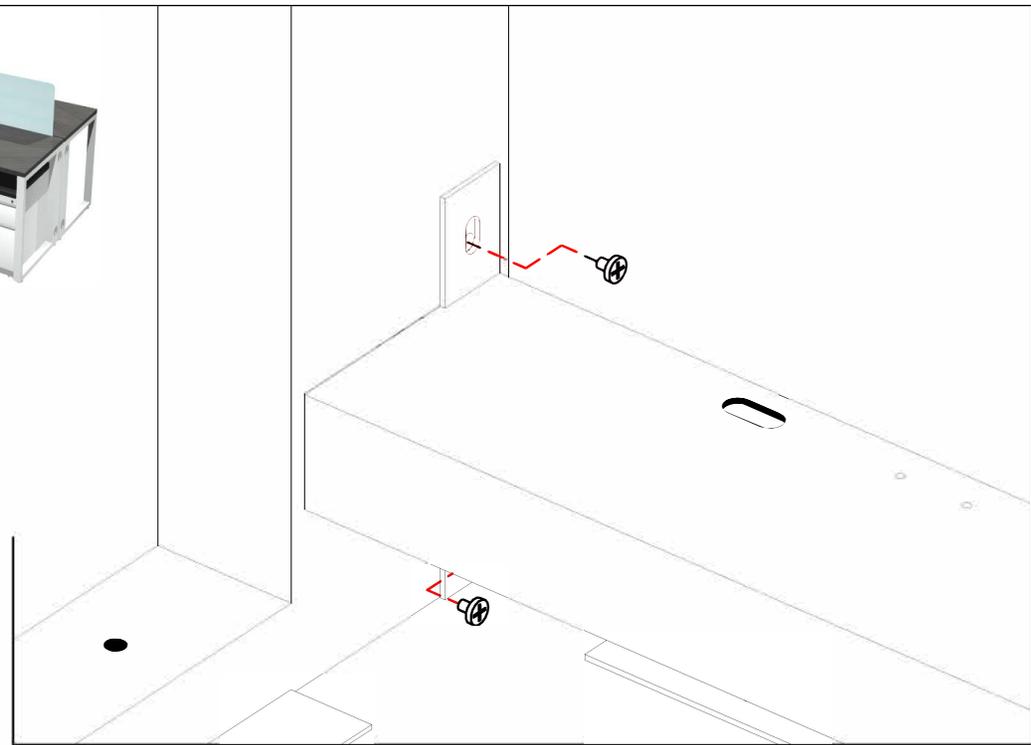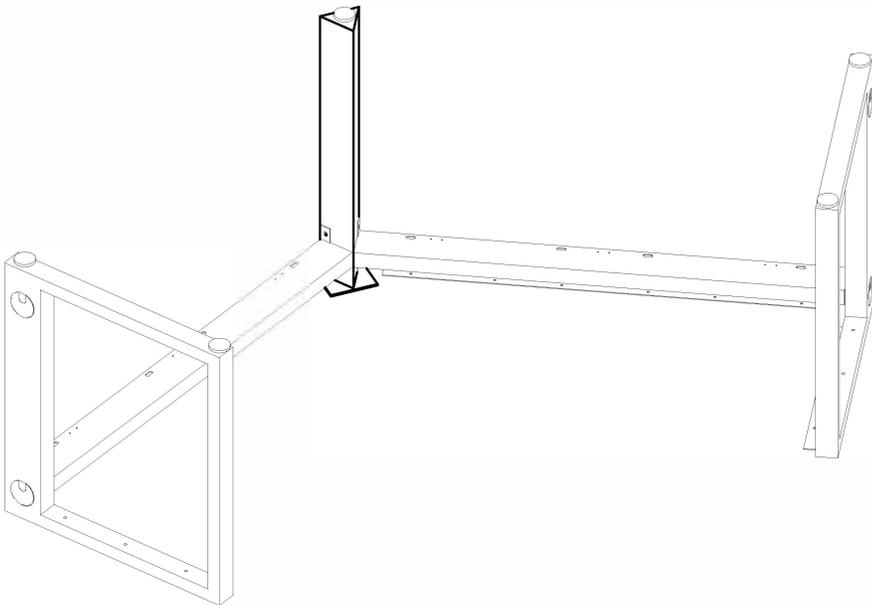


3. PLACE WORKSURFACE UPSIDE DOWN ON BLANKET OR SOMETHING TO AVOID SCRATCHES.

4. PLACE COMPLETED LEG ASSEMBLY ON WORKSURFACE MAKING SURE TO LINE UP BACK OF LEGS TO BACK EDGE OF WORKSURFACE.


5. SECURE LEG ASSEMBLY TO WORKSURFACE USING HARDWARE PROVIDED.

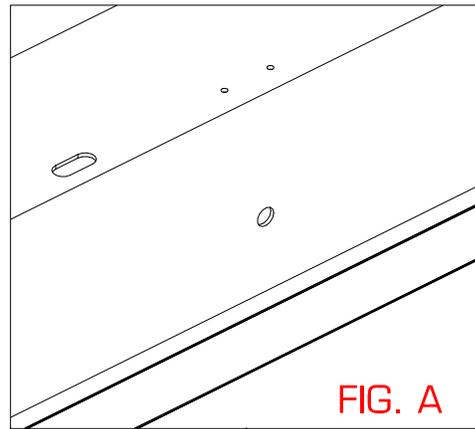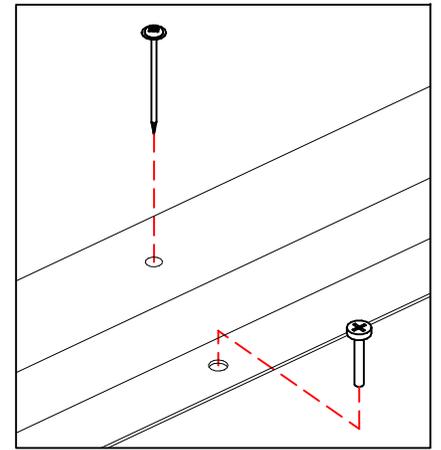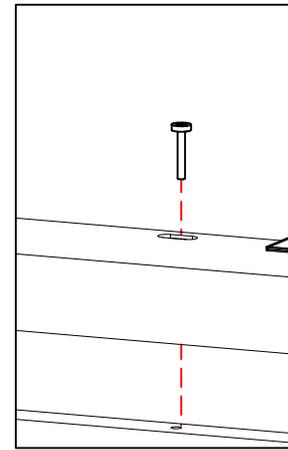

NOTE: MAKE SURE THERE IS A HALF INCH GAP FROM BACK EDGE OF WORKSURFACE TO BACK OF TROUGH (SEE FIG. A).

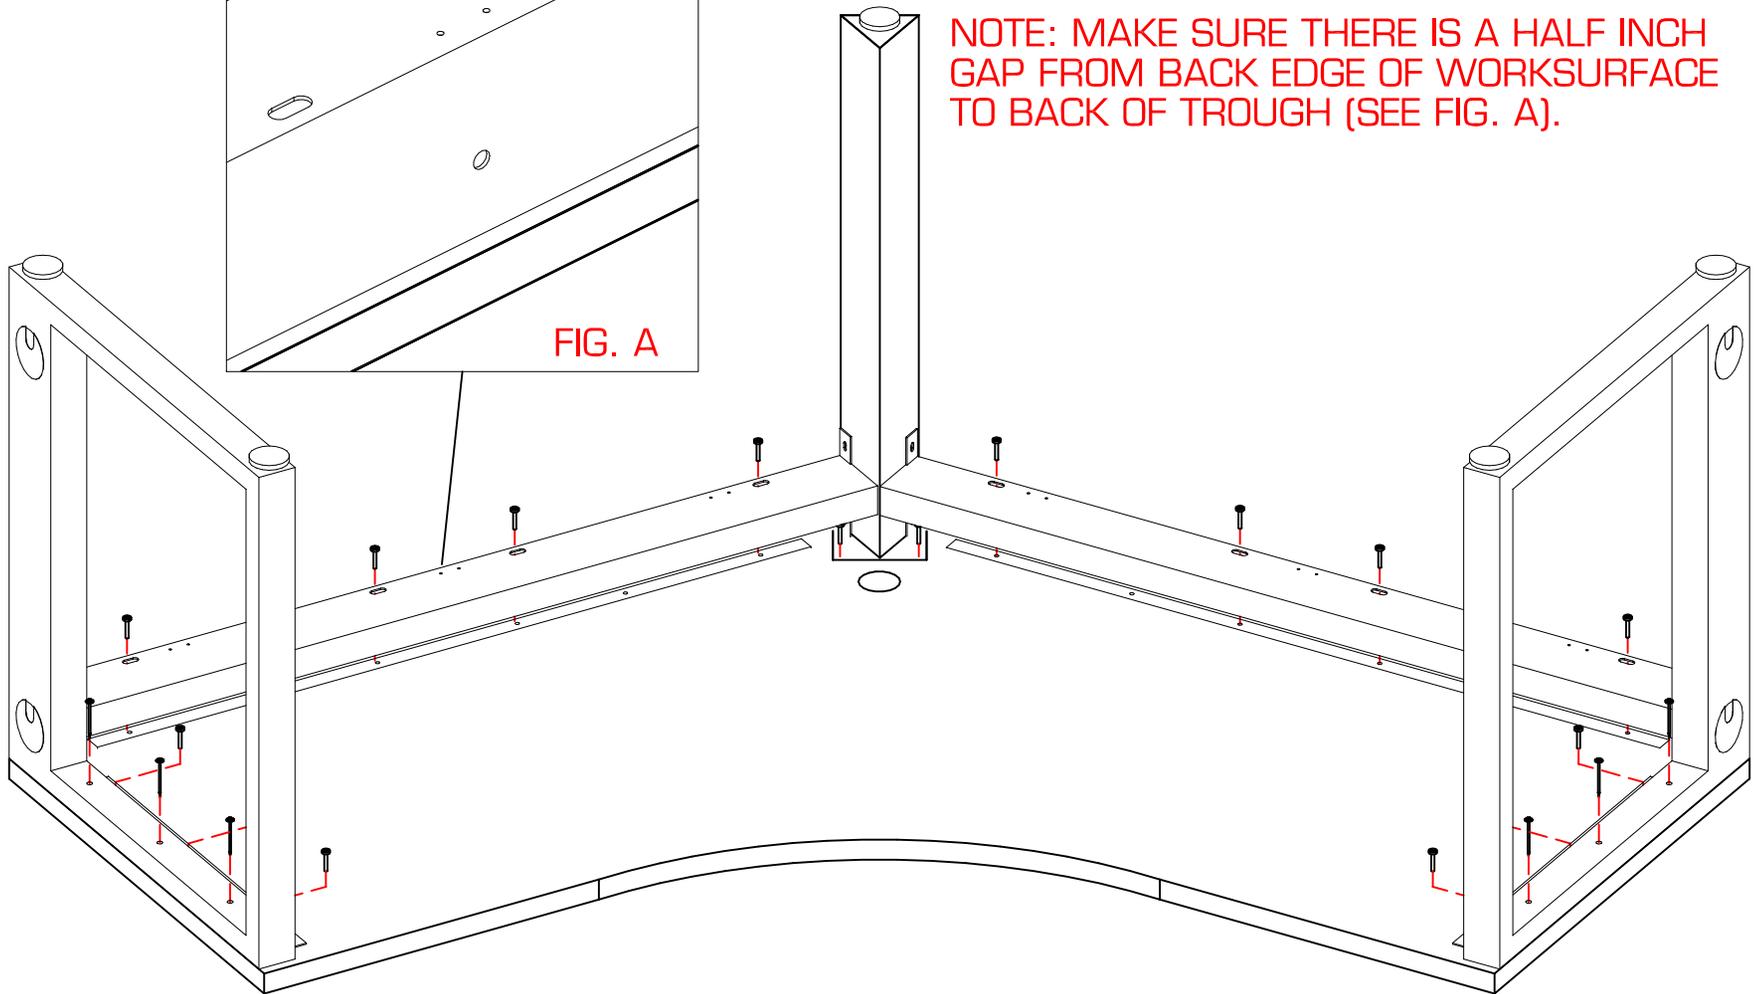

6. IF SCREENS WERE ORDERED WITH STATION, ATTACH SCREEN BRACKETS TO TROUGH AS SHOWN BELOW USING HARDWARE PROVIDED.

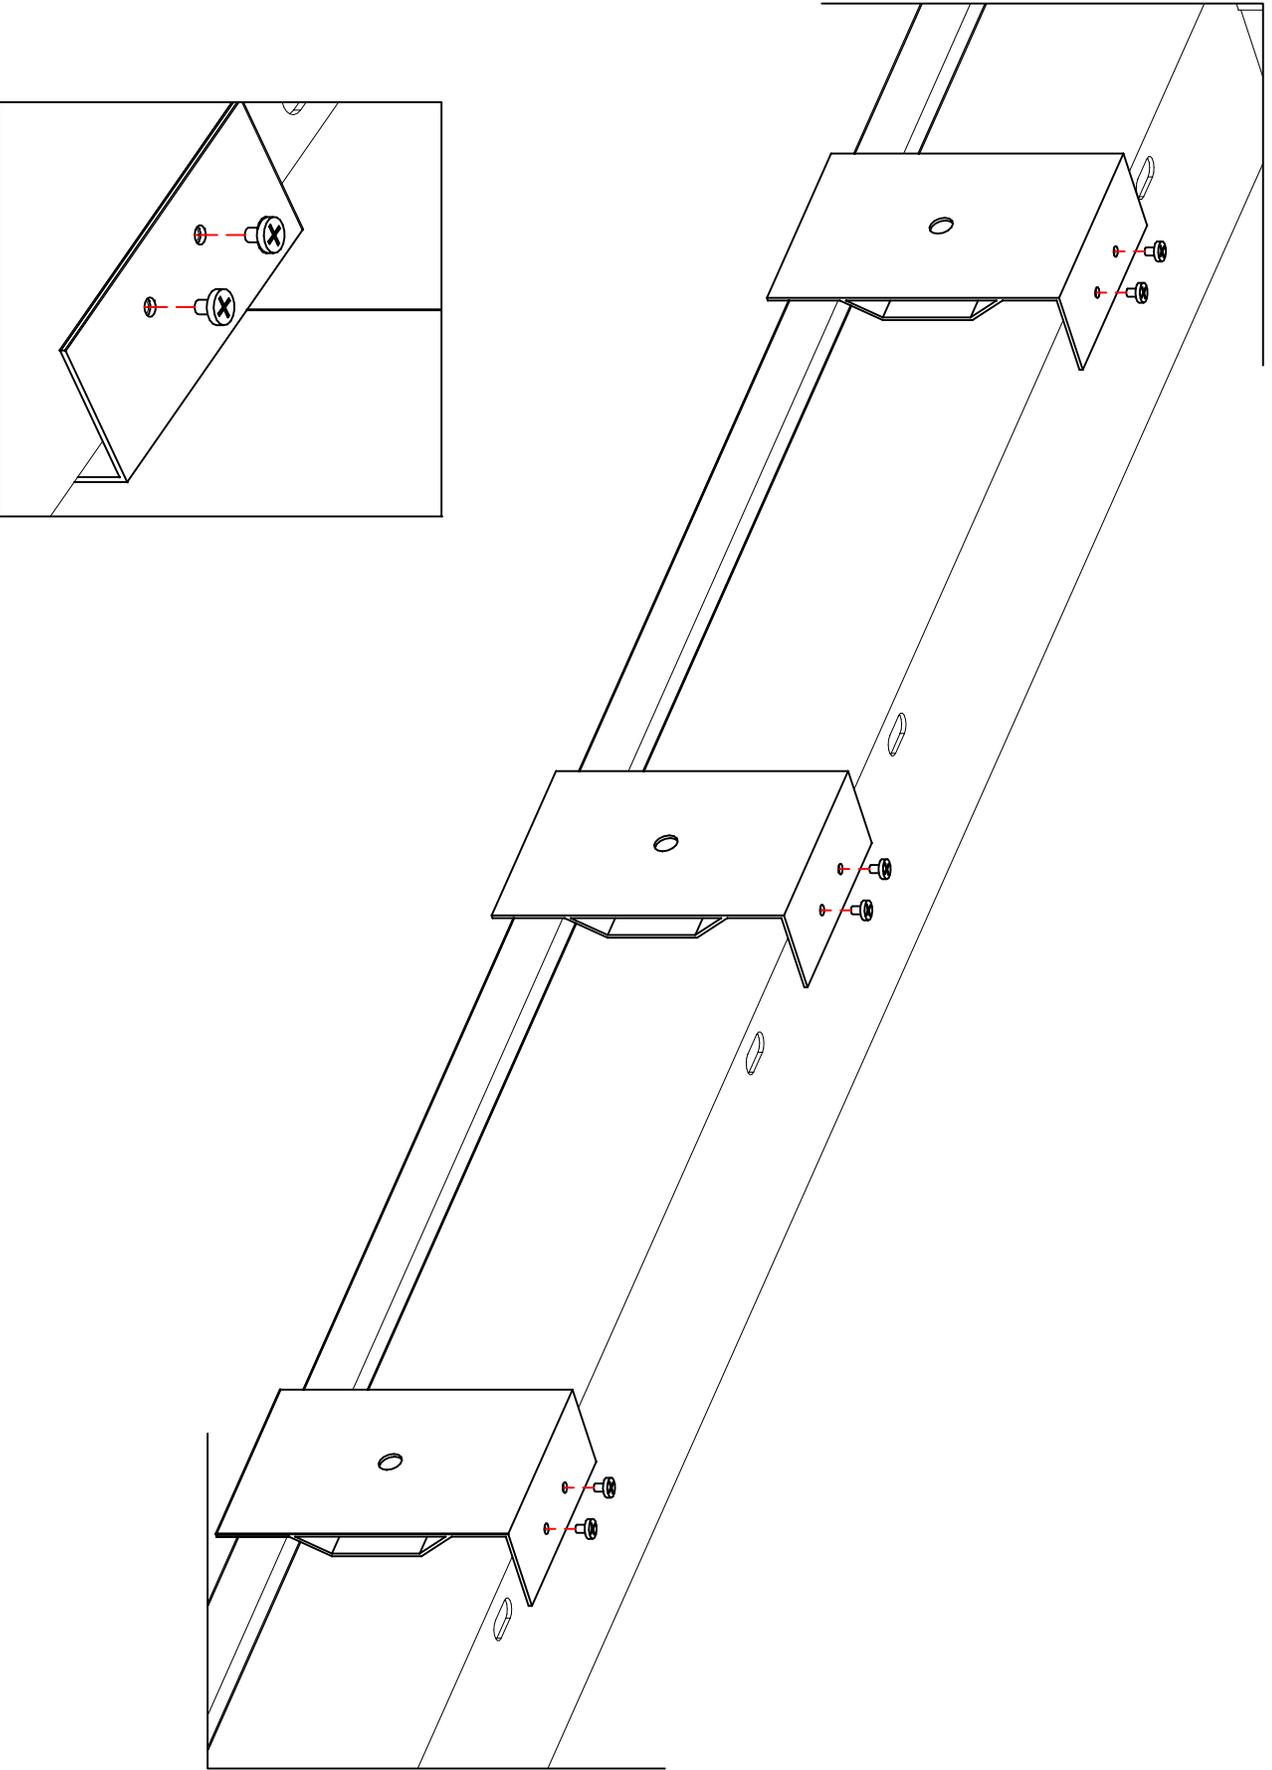

7. ROTATE COMPLETED TABLE ASSEMBLY OVER.
8. ALIGN HOLES ON SCREEN TO HOLES OF SCREEN BRACKETS AND ATTACH USING PROVIDED HARDWARE.

