




Assembly Instructions

MODEL NO.: OFD169

RECEPTION DESK SHELL

TUN010CL	TUN011KC		TUN021AG	TUN013LB	TUN018SC	TUN015BG
A  Cam Lock 22Pcs+4Pcs(spare)	B  Klix Cam 22 Pcs+4 Pcs(spare)	C  Dowel 9Pcs+2Pcs(spare)	D  Adjustable Glide 4Pcs	E  6 Hole L-Bracket 6Pcs	F  Screw #4*5/8" 36Pcs+5Pcs(spare)	G  60mm Black Grommet 2Pcs

STEP1

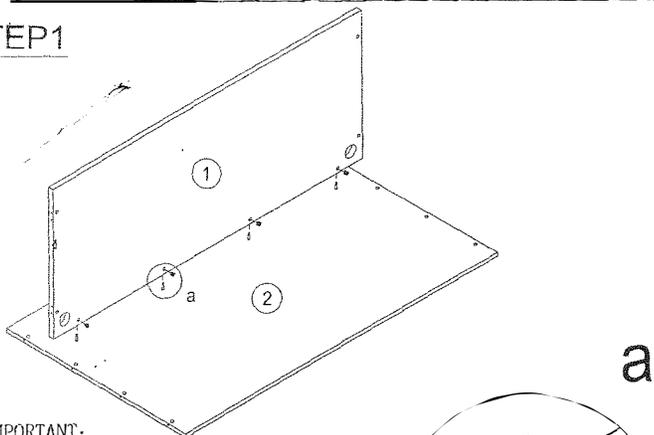


IMPORTANT:

FUNCTION OF KLIX CAM




1/4 RIGHT
TURN FOR
LOCKING



MAKE SURE THE ARROW IS
POINTING UPWARDS
BEFORE INSERTING INTO
THE PANEL'S HOLE.

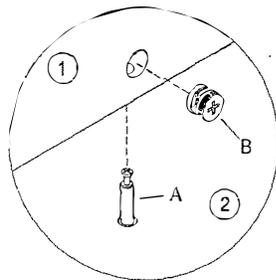

STEP2

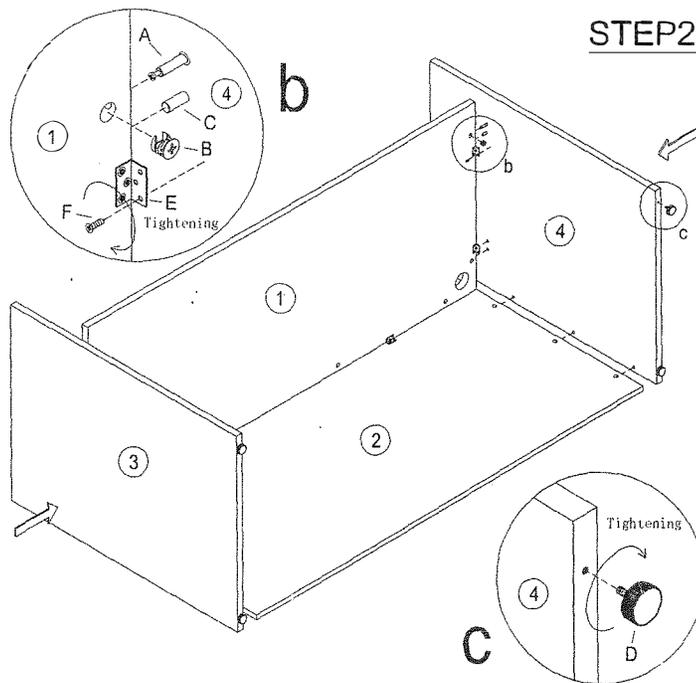

STEP3

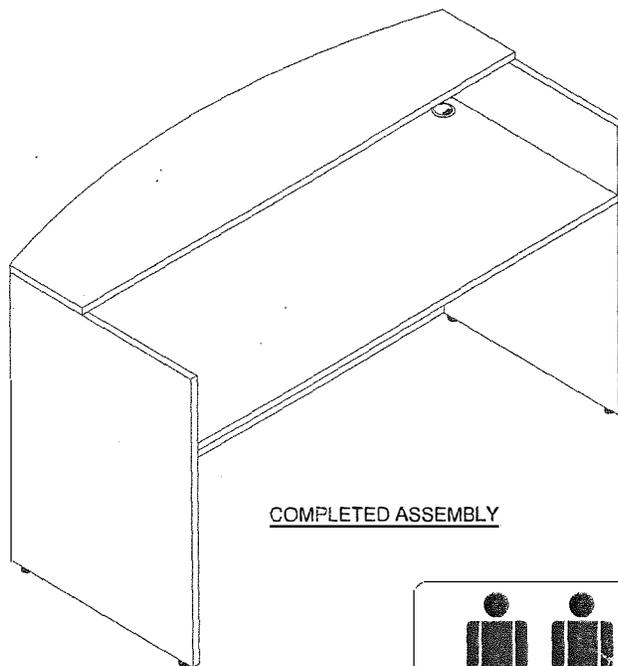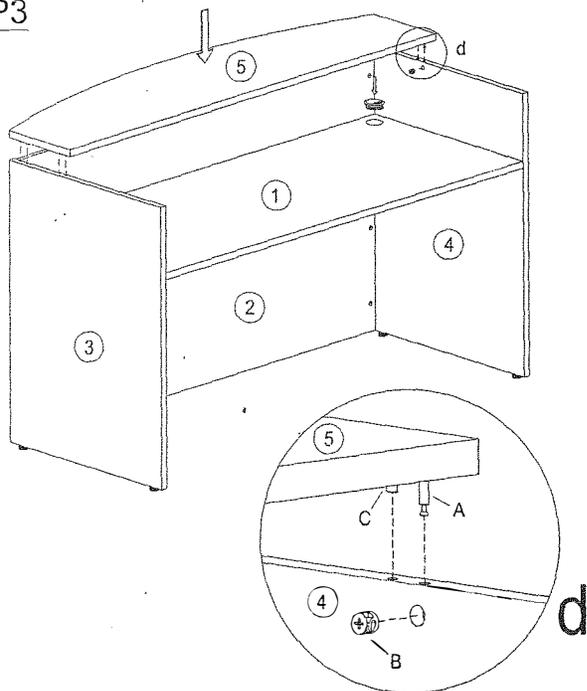

COMPLETED ASSEMBLY



IMPORTANT NOTE:

- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Do not tighten any screws/bolts until all completely assembled.